

TECHNICAL SPECIFICATIONS

VIDEO	
Format	HDMI 1.4
Input Interface	(4) HDMI
Output Interface	(4) HDMI
Resolution	480i, 480p, 720i, 720p, 1080i, 1080p
DDC	5 volts p-p (TTL)
Input Equalization	Automatic
Input Cable Length	Up to 20 ft.
Output Cable Length	Up to 20 ft.
AUDIO	
Output	(1) 3.5 mm Stereo Audio
POWER	
Power Requirements	12V DC, 3A power adapter with center-pin positive polarity
ENVIRONMENT	
Operating Temp	32° to 104° F (0° to 40° C)
Storage Temp	-4° to 140° F (-20° to 60° C)
Humidity	0-80% RH, non-condensing
CONTROL	
Front Panel	Push Buttons with LED indicators
RS-232	Via Serial @ 9600 bps
Hot Keys	Via Keyboard
Emulation	Keyboard, Mouse and Video
IP	Via Web Browser
IR	Via Remote Control

WHAT'S IN THE BOX

PART NO.	QTY	DESCRIPTION
QWALL-HD-S	1	4X4 HDMI Matrix & WALL System
PS12VD3A	1	12V DC, 3A power adapter with center-pin positive polarity.
SAVI-RMT	1	IR Remote Control
	1	Quick Start Guide

NOTICE

The information contained in this document is subject to change without notice. SMART-AVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for particular purpose. SMART-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material. No part of this document may be photocopied, reproduced, or translated into another language without prior written consent from SMART-AVI, Inc.



Toll Free: (800) AVI-2123

Phone: (702) 800-0005

2455 W. Cheyenne Ave, Suite 112
North Las Vegas, NV 89032

smartavi.com

Smart-AVI
SMART AUDIO VIDEO INNOVATION

QWALL-HD

4X4 HDMI Matrix & WALL System



4X4 HDMI VIDEOWALL PROCESSOR,
POWERFUL, COMPACT AND EASY TO
USE CAN BE CONTROLLED FROM
ANYWHERE THROUGH WEB BROWSER

Quick Start Guide


A full Manual can be downloaded from
www.smartavi.com/QWALL-HD/

SYSTEM CONTROL

There are four ways to control the QWALL-HD: RS-232 Serial Commands, Front Panel, IR and Web control.


The settings for the serial connection are as follows: Baud rate: **9600**; Data Bits: **8**; Parity: **None**; Stop Bits: **1**; Flow Control: **None**.

WEB UI / IP CONTROL

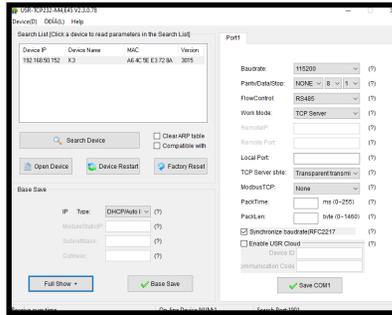

The IP address of the device can be found by using our provided application IPFinder2. The default username and password to access the webpage is:

Username: **admin**
Password: **admin**

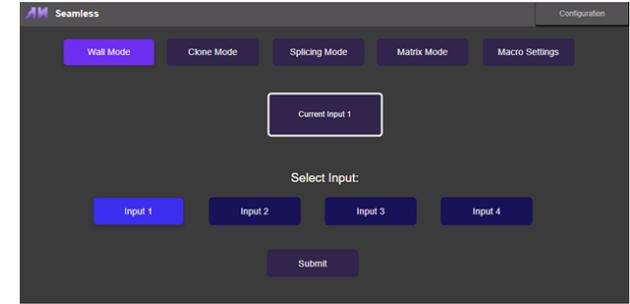


HARDWARE INSTALLATION

1. Make sure QWALL-HD is turned off.
2. Connect up to 4 HDMI inputs (i.e. PC, Blu-Ray Player, Digital Signage, etc.) to the HDMI INPUT ports of Seamless using HDMI cables.
3. Connect up to 4 HDTVs to the HDMI OUTPUT ports of Seamless using HDMI cables or HDMI-to-DVI adapters for DVI displays.
4. Connect a cat5/cat6 cable to the RJ45 connector for web controller.
5. Optionally connect an RS232 cable from PC to the RS-232 port of the unit for additional control.
6. Turn on Seamless
7. Wait for the unit to initialize. This should take less than a minute.

Note:

1. Both source and display devices must be powered on for LED indicators to detect device connection.
2. Ensure power supplied are disconnected from all devices before installation.

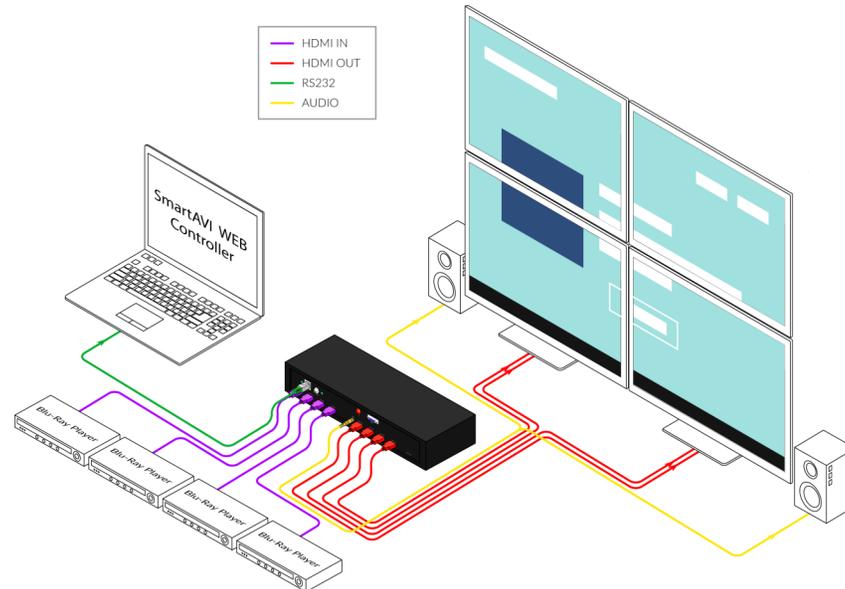

Command	RS-232	IR
Set Input '# to Wall Mode	//I#W	IN -> # -> WALL -> OK
Set Input '# to Clone Mode	//I#C	IN -> # -> CLONE -> OK
Set Input '# to quickly set up matrix array of all 4 inputs, with 'X' on Output 1	//I#M	IN -> # -> QUAD -> OK
Set Input '# to Output 1	//I#O1	IN -> # -> OUT -> 1 -> OK
Set Input '# to Output 2	//I#O2	IN -> # -> OUT -> 2 -> OK
Set Input '# to Output 3	//I#O3	IN -> # -> OUT -> 3 -> OK
Set Input '# to Output 4	//I#O4	IN -> # -> OUT -> 4 -> OK
Set Input '# to do 1x2 splicing on Output 1 + 2	//I#S1212	IN -> # -> F1 -> OK
Set Input '# to do 1x2 splicing on Output 3 + 4	//I#S1234	IN -> # -> F1 -> F1 -> OK
Set Input '# to do 2x1 splicing on Output 1 + 3	//I#S2113	IN -> # -> F2 -> OK
Set Input '# to do 2x1 splicing on Output 2 + 4	//I#S2124	IN -> # -> F2 -> F2 -> OK
Set Input '# to do 1x4 splicing	//I#S13	IN -> # -> F3 -> OK
Set Input '# to do 4x1 splicing	//I#S31	IN -> # -> F4 -> OK